

The Creative School

Design + Technology LAB




Table of	3D Printing General Overview	3
	FDM Printing	4
Contents	FDM Slicing Software	4
	Getting Started with Cura	6
	FDM Print Settings	7
	Estimating FDM costs in Cura	10
	FDM Quality vs Speed	10
	Low Resolution/Fast Print	10
	High Resolution/Slow Print	11
	FDM Supports	12
	SLA Printing	14
	SLA Slicing Software	14
	SLA Print Settings	16
	SLA Printability	17
	Estimating SLA costs in PreForm	17
	SLA Quality vs Speed	18
	Low Resolution/Fast Print	18
	High Resolution/Slow Print	19
	SLA Supports	20
	SLS Printing	22
	SLS Slicing Software	22
	SLS Print Settings	24
	SLS Printability	25

Estimating SLS costs in PreForm

3D Printing General Overview

Welcome to the wonderful world of 3D printing! In this document, you will find information about **3D file preparation**, **printing specifications** and **best practices**.

What is 3D Printing?

3D printing is an additive manufacturing process that creates physical, three-dimensional objects using digital 3D models. These objects are often made with thermosoftening plastics or UV sensitive resins. The material is added to a platform layer by layer, resulting in the form of the object.

There are 4 Basic Steps with all 3D Printing Processes:

1. Get an .STL Model

Most 3D Prints are modelled using Computer Aided Design software; there are many software options for all levels of modelling experience. Alternatively, you can use open source models from online libraries like thingiverse or printables. Once an object has been modelled with all design considerations, **export** your 3D model as an .STL file. See our tutorial documents for exporting the STL in your preferred software. Submit to the D+TL 3D Printing Services Google Form for processing.

2. Select a Printing Process

A model's structural properties, intended use, print time and material preference often determines the print process. The timeline and material offerings of the two print processes have its advantages and disadvantages.

The Design + Technology Lab supports three different 3D printing processes:

FDM (thermosoftening filament extrusion) printing uses spools of PLA plastic filament. A spool of filament is fed through a heated nozzle and strategically layered to form the shape of the model.




Example of an FDM-printed dinosaur



Example of an SLA-printed dinosaur



Example of an SLS-printed dinosaur



SLS (nylon powder fusion) printing uses a laser to fuse together nylon powder to create a solid 3D print without the need for supports.

3. Assign Print Settings

Assign print settings to your STL with a separate "slicing" software, such as <u>Cura</u> for FDM prints, or <u>Preform</u> for SLA and SLS prints. **Slicing** refers to the conversion of an .stl file to .gcode. An .stl file holds structural properties of the three-dimensional model, while .gcode translates these properties into strategic pathways for a printer to execute. These pathways are aligned with the printer's parameters and are formatted using a combination of X, Y and Z coordinates.


4. Printing the Model

After a model has been prepared, sliced and approved by a D+TL Technician, it is assigned to one of our printers.

<u>Take a look at the Lab's 3D printing detailed video of file setup</u> <u>for 3D printing.</u>



A 3D Printed Articulated Kuka Robot arm.

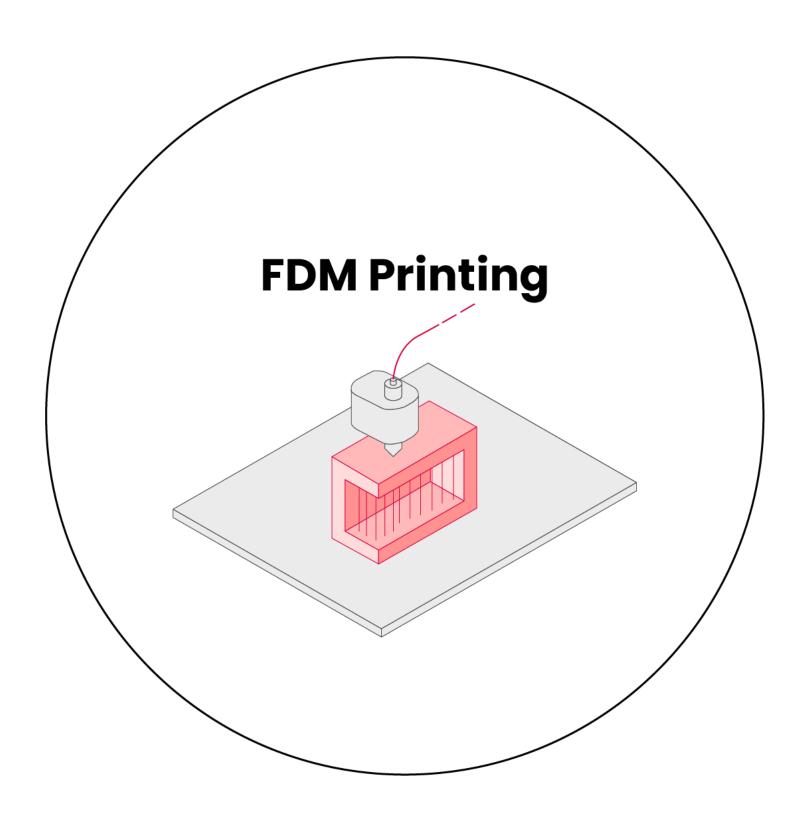

FDM Slicing Software


A 3D slicing software is the in-between step after modeling and before printing. The slicer interprets the STL's array of polygons into printable, layered toolpaths (toolpaths = specific locations where the machine travels and does its thing). The slicing software can estimate the duration of 3D printing time and the amount of material that will be used.

The Design + Technology Lab's recommended slicer for FDM printing is <u>Ultimaker Cura</u> (it's free, so you can download it, too!).

Previewing your prints with a slicer allows you to get helpful information, such as:

- Quantity of detail: the vertical thickness of each layer of the model being printed
- Where support material will be applied to ensure the adherence of model(s) to the platform and overall success of prints.
- Time required to complete the print
- Areas that will be too thin to print successfully (details smaller than Imm may not print cleanly)
- Object scale (The maximum printing volume of the Lab's FDM printers is 256 x 256 x 256mm)
- The orientation of your object in relation to the print "grain" (see page 8: Layer Thickness)
- "Printability" errors with your model


Getting Started with Cura

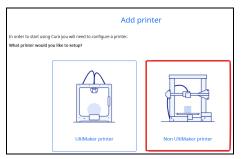

"Add Printer" menu. "Non-Networked Printer" option is highlighted (step 1).



"Custom FFF Printer" is selected (step 2).

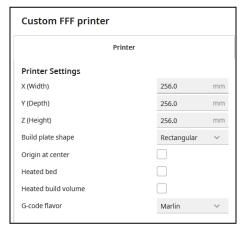

Adding *virtual* printer settings on Cura (step 3).


Ultimaker Cura is a free slicer **for FDM prints**. Upon downloading the software, it will ask you to Create an Account, this is optional and can be skipped using the icon at the bottom right of the page.

Please note, the following section of this document is a guide to set-up the Cura software with a virtual printer for *education* and cost estimation purposes only, not for specific printer parameters. Click here for a full Cura tutorial.

- Under the Add a Printer Menu, select Add a Non-Networked Printer.
- 2. A menu will appear with printer models. Find the "Custom" category, select "Custom FFF printer".
- 3. Proceeding to the next step takes you to a printer setup page. Edit the X, Y and Z settings to match 256mm, so the virtual printer's scale matches the D+TL printers.
- 4. Click "next", and you're ready to get started in Cura. Congratulations!

Once you've set-up your virtual printer, import your 3D model with File > Open File(s). You should be able to view your model within the bounds of the virtual printing platform. In the top right side of the main Cura interface, you'll find a drop-down menu for various print settings. This is where you'll define the material quality of your print. Feel free to explore these menus and mess around with the values.

To explain some of the setting options, let's take a look at the pertinent parts of the printer and printing process.

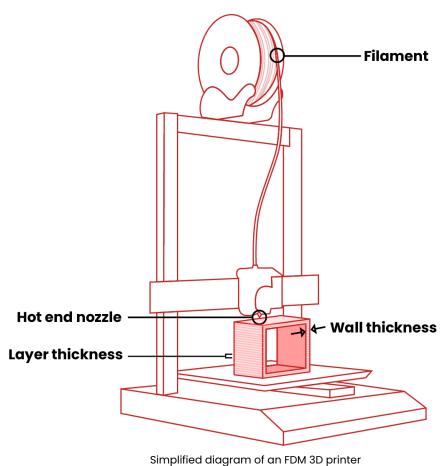

Filament: The PLA plastic filament at the Lab is 1.75mm in diameter.

The filament diameter does not impact the print quality.


Hot end nozzle: The hot end nozzles at the Lab have a diameter of 0.4mm. This dictates the thickest possible layer height.

Layer thickness: The layer thickness or layer height refers to the height of each layer in mm.

Wall thickness: The wall thickness refers to the thickness of the surface of the printed object.

FDM Print Settings

Layer thickness or height refers to the height of each layer in mm. Higher values produce faster prints in lower resolution, lower values produce slower prints in higher resolution. The layer thickness/height *can* span anywhere from 0.05mm to 0.4mm, though it is recommended to be between 0.1mm - 0.3mm.

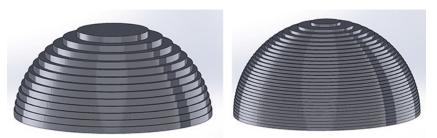


3D printers build up prints in a series of thin *horizontal* layers.


Make sure you keep this in mind when orienting your model:

critical details should be oriented parallel to the build platform.

If the object will be under pressure, it is important to consider the orientation of the "grain", as it affects the object's strength.

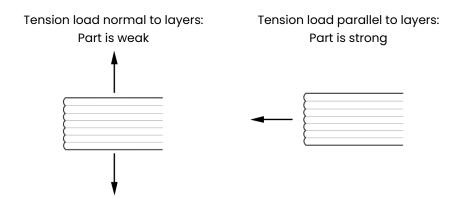

Wall thickness refers to the thickness of the surface of the printed object. The wall thickness has to be greater than or equal to the layer thickness, and is recommended to be a multiple of the nozzle diameter.

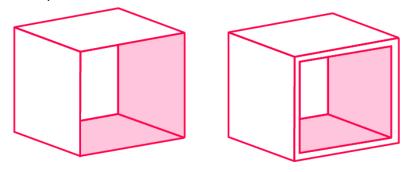

Infill is an unseen interior structure of 3D prints that plays a very important role in the overall strength of your model. Infill is responsible for connecting the outer shells of your 3D print. Unless otherwise specified, the D+TL Lab 3D prints with a 10% infill.

For models that require more strength or need to be assembled with other parts, it is best to select a higher print density to ensure they can sustain enough applied forces. For projects that are for prototyping or visualization purposes, a low print density will suffice.

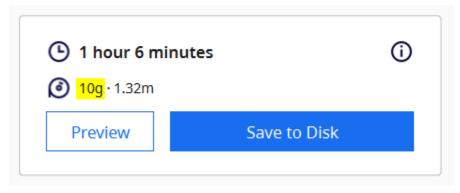


Image comparing 'grid' infill pattern at 5%, 10% and 20%

Estimating FDM costs in Cura

At the Lab, FDM prints are priced based on their weight. For FDM prints, the Lab charges \$0.15 / gram of PLA plastic.

Once you have oriented your model, added supports, assigned print quality and infill, Cura will calculate the approximate duration and weight of your 3D print.




FDM Quality vs Speed

The quality of a 3D print is impacted by the **height of each layer.** You can think about print quality like the "resolution" of an image. Low resolution is more "pixelated." High resolution is more detailed. You can read more information about the specifics below. The Lab prints with a 0.2mm layer height unless otherwise specified.

Low Quality FDM (0.2mm layers)


High Quality FDM (0.1mm layers)




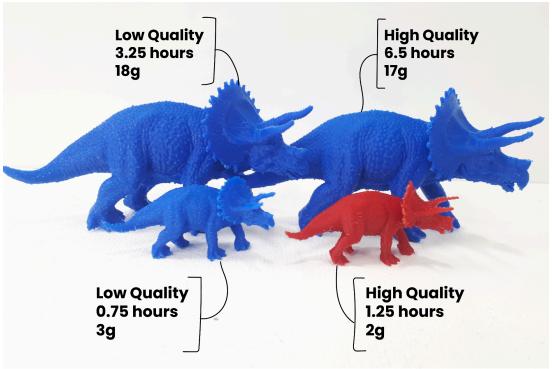

Low Resolution/Fast Print

Lower quality will print faster. Printing at a low quality increases the height of each layer of the object. This does not affect the final size of your object. Thicker layers do not allow for fine surface detail and the layered texture is more visible. The walls of a low quality print will be slightly thicker and use slightly more plastic.

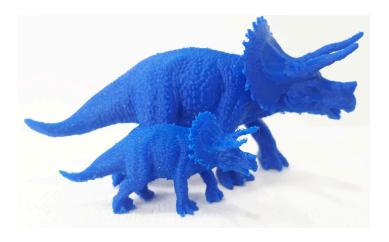

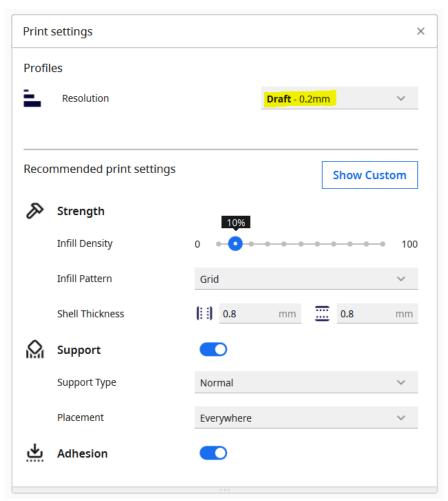


The above image shows the **FDM** print settings for Low Resolution (in Cura). The layer height is set to 0.2 mm.

High Resolution/Slow Print

Higher quality will print slower. Printing at a high quality decreases the height of each layer. This does not affect the final size of your object. Thinner layers look smoother and can be more detailed. The walls of a high quality print will be slightly thinner and use slightly less plastic.



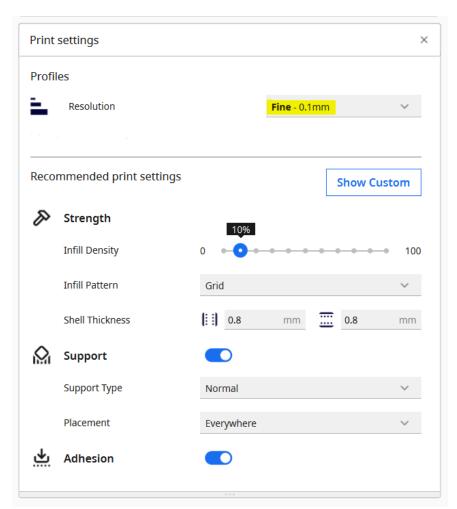

The above image shows High Quality **FDM** print settings (in Cura) for high quality prints. The layer height is set to 0.1mm.

FDM Supports




Flush Angle Cutters


When the plastic comes out of the printing nozzle, it is liquified and does not hold its shape well. Each new layer must be supported by the layer beneath it. If your model has an overhang which is not supported by anything below, there's a good chance it will droop. To avoid this, it is recommended to use additional 3D printed support structures called "supports".

Supports increase the material weight and duration of the print. They can cause little imperfections in the object's surface, and can be a hassle to remove.

The Lab recommends using "flush angle cutters" to help remove stubborn support material.

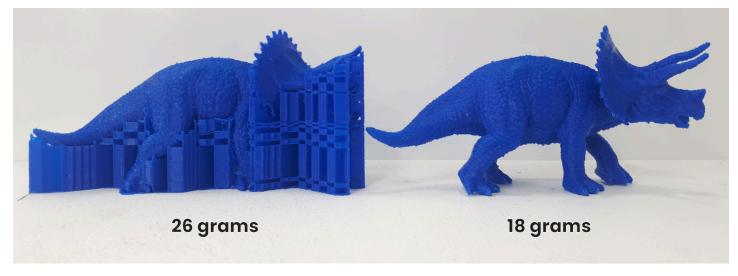

The above image compares the weight of an FDM 3D print before and after the supports are removed.

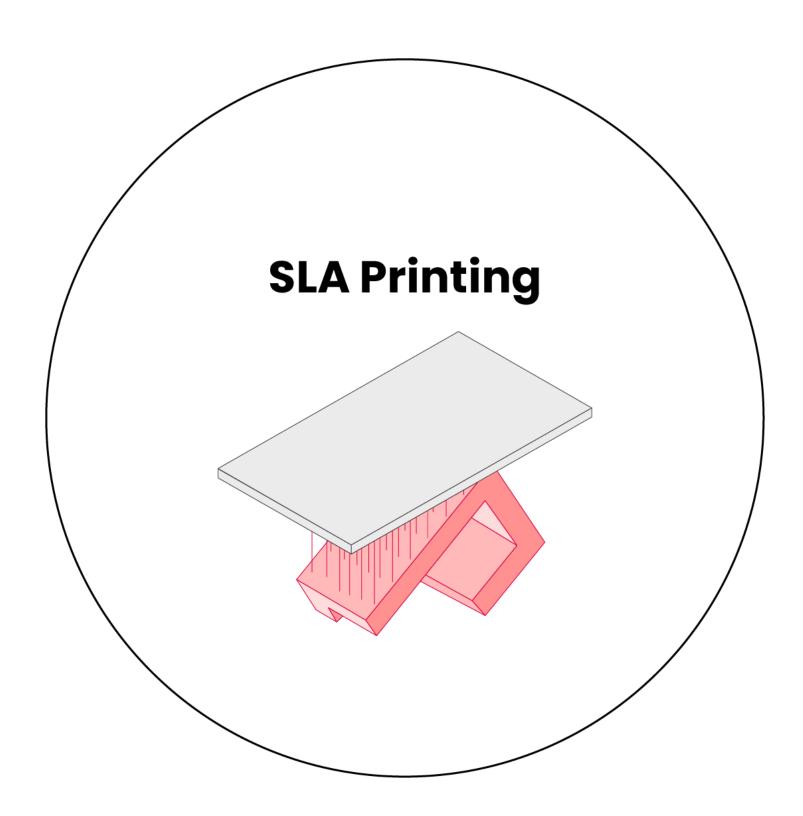

SLA Slicing Software

A 3D slicing software is the in-between step after modeling and before printing. The slicer interprets the STL's array of polygons into printable, layered toolpaths (toolpaths = specific locations where the machine travels and does its thing). The slicing software can estimate the duration of 3D printing time and the amount of material that will be used.

The Design + Technology Lab's slicer of choice for our SLA printer is <u>PreForm</u>. This slicer is free! The Lab encourages you to preview your SLA print in PreForm prior to printing to get helpful information, such as:

- Quantity of detail: the vertical thickness of each layer of the model being printed
- Where support material will be applied to ensure the adherence of model(s) to the platform and overall success of prints.
- Time required to complete the print
- Areas that will be too thin to print successfully (details smaller than 1mm may not print cleanly)
- Object scale (The maximum SLA printing volume is 145 x
 145 x 193 mm)
- The orientation of your object in relation to the print "grain" (see page 16: SLA Printability)
- "Printability" errors with your model

SLA Print Settings

Although FDM printing is cheaper and the preferred process for most models, the SLA printing technology offers a much higher print resolution quality than its counterpart.

When printing using SLA technology, each consecutive layer is hardened as a solid layer. This means that the final overall 3D printed object is completely solid on the interior: there are **no wall thickness or infill settings**. This makes the slicing process more straightforward, compared to FDM.

Applying print settings in PreForm is as simple as:

- 1. Choosing the printer type (the Lab uses Form 3 for SLA)
- 2. Choosing the resin type (either clear standard, white standard, or castable wax resin)
- 3. Selecting your preferred layer thickness (see pages 19-20)
- 4. Apply auto-generated support structures (see page 21)

If you want to print a hollow model, you can use a mesh-editing software to hollow-out your .STL file to print a shell only. This saves on unnecessary material cost.

SLA Printability

Check out this article for helpful SLA design tips!

3D printers build up prints in a series of thin *horizontal* layers. Make sure you keep this in mind when orienting your model: critical details should be oriented parallel to the build platform.

Due to the physical nature of SLA printing, there is often the chance of your print "suction cupping" against the resin tank. This phenomenon occurs when there is a cavity or hollow portion of your object. Read more about "suction cupping" here.

To avoid "suction cupping", use a 3D design software to either fill the hollow or add drainage holes to minimize suction during printing.

Estimating SLA costs in PreForm

When a model is imported and support structures added, you'll be able to see the time and material details of your print. These details can be used to estimate the cost of your print (explained below).




At the Lab, SLA prints are priced based on their weight. For SLA prints, the Lab charges \$0.45 / gram of standard resin, and \$0.90 / gram of castable wax resin. The PreForm software calculates the volume (mL) of resin that will be printed. Formlabs resin weighs approximately 1 g/mL. You can use that approximation to estimate the print's total weight.


SLA Quality vs Speed

The quality of a 3D print is impacted by the **height of each layer.** You can think about print quality like the "resolution" of an image. Low resolution is more "pixelated." High resolution is more detailed. You can read more information about the specifics below.

Low Resolution SLA (supports removed)

High Resolution SLA (with supports)

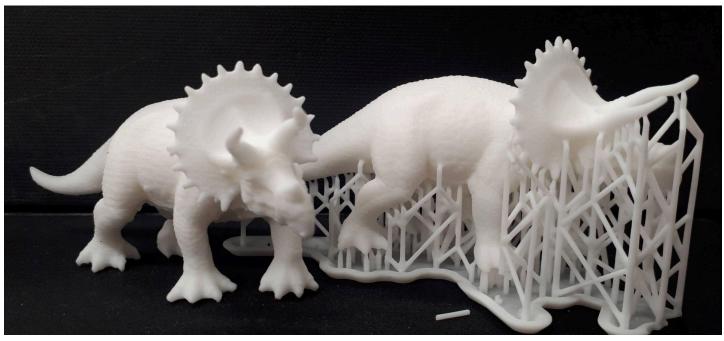

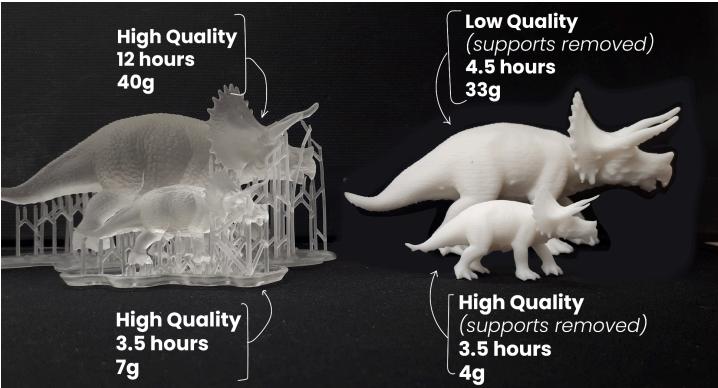

Low Resolution/Fast Print

Lower quality will print faster. Printing at a low quality increases the height of each layer of the object. This does not affect the final size of your object. Thicker layers do not allow for fine surface detail and the layered texture is more visible.





The above image shows Low Quality **SLA** print settings (in Preform). The layer height is set to 0.1 mm.

High Resolution/Slow Print

Higher quality will print slower. Printing at a high quality decreases the height of each layer. This does not affect the final size of your object. Thinner layers look smoother and can be more detailed.





The above image shows High Quality **SLA** print settings (in Preform). The layer height is set to 0.025 mm.

SLA Supports




Flush Angle Cutters


Each new layer must be supported by the layer beneath it. If your model has overhangs which are not supported by a previous layer, there's a good chance it will print poorly. To avoid this, it is recommended to use additional 3D printed material called "supports".

Supports increase the material weight and duration of the print. They can cause little imperfections in the object's surface, and can be a hassle to remove.

The Lab recommends using "flush angle cutters" to help remove stubborn support material from SLA prints.

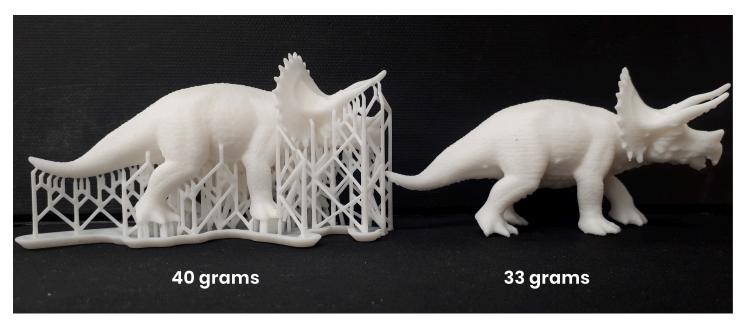

The above image compares the weight of an SLA 3D print before and after the supports are removed.

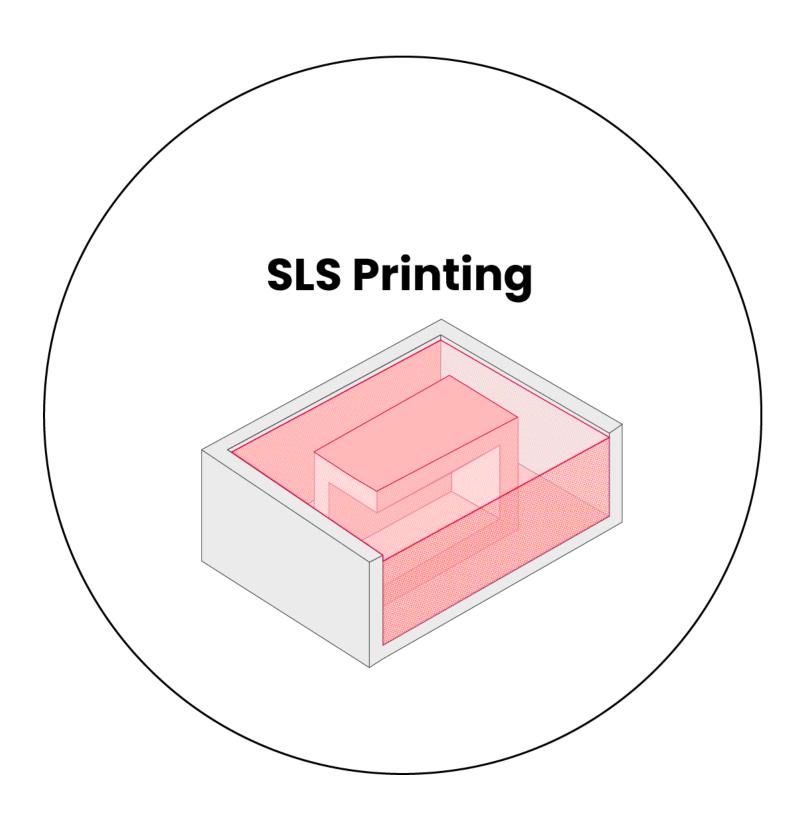

SLS Slicing Software

A 3D slicing software is the in-between step after modeling and before printing. The slicer interprets the STL's array of polygons into printable, layered toolpaths (toolpaths = specific locations where the laser beam travels and does its thing). The slicing software can estimate the duration of 3D printing time and the amount of material that will be used.

The Design + Technology Lab's slicer of choice for our SLS printer is <u>PreForm</u>. This slicer is free! The Lab encourages you to preview your SLS print in PreForm prior to printing to get helpful information, such as:

- Time required to complete the print
- An approximate weight of the final object
- Areas that will be too thin to print successfully (details smaller than 1mm may not print cleanly)
- Object scale (The maximum SLS printing volume is 165 x 165 x 300mm)
- The orientation of your object in relation to the print "grain" (see page 24: SLS Printability)
- "Printability" errors with your model

SLS Print Settings

Although other printing types are cheaper and the preferred process for most models, the SLS printing technology offers a stronger, more durable product than its counterparts.

When printing using SLS technology, each consecutive layer is hardened as a solid layer, supported by unfused (loose) nylon powder. This means that the final overall 3D printed object is completely supported and solid on the interior: there are **no wall thickness, infill or support settings**. This makes the slicing process more straightforward, compared to FDM and SLA.

Applying print settings in PreForm is as simple as:

- 1. Choosing the printer type (the Lab uses **Fuse 1** for SLS)
- 2. Choosing the material type (the Lab uses Nylon 12)


SLS Printability

Check out this article for helpful SLS design tips!

3D printers build-up prints in a series of thin *horizontal* layers. Make sure you keep this in mind when orienting your model: critical details should be oriented parallel to the build platform.

Estimating SLS costs in PreForm

When a model is imported, you'll be able to see the time and material details of your print. These details can be used to estimate the cost of your print (explained below).

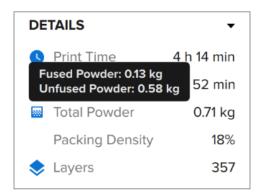

At the Lab, SLA prints are priced based on their weight. For SLS prints, the Lab charges \$0.50 / gram of solid fused material, plus an additional flat \$7.00 processing fee. The PreForm

software calculates the **weight (kg) of nylon powder that will be solidified** (hover your cursor over the label "Total Powder" in the Preform software for more details). You can use that approximation to estimate the print's total cost.